




# Assembly Instructions

## Metal Lawn & Bed Edging

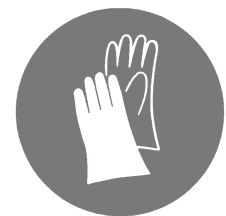

Wear gloves at all times!

Push the ends into each other butt to butt and screw two to three elements together to form a unit. We recommend M4 x 10 mm screws plus nut. Rock a spade back and forth to create V-shaped indentations. To ensure straight lines, use a plank of wood to guide you. If you prefer wavy edges, use a garden hose to map out perfect curves. The better you have prepared the grooves, the easier it will be to implement the edging.

Place one of the bolted units in the groove at an angle with one end sticking out, so the next element can be joined. Protect the top with a piece of wood and carefully tap the edging to your desired height - we recommend to leave a height of approx. 2 - 3 cm.

**Tip:** to achieve higher stability and make installation even easier, use ground anchors with a length of 450 mm. Plan one ground anchor per running metre.